

1080P high definition video output.

4. Supports RMVB/RM(RV8/9), h.263, h.264, MOV/MP4/M4V, MPEG-1/2(VOB), MPEG-4(XVID/DIVX), WMV7/VC-1, MKV, AVI, TS/TP, VOB, PMP, FLV 1920*1080P video format.

5. Supports MP3, WMA, AFE, FLAC, OGG, APE, AAC, AC3 and DTS music formats.

6. Supports JPEG, GIF, BMP, PNG photo formats. Supports rotate, zoom and slideshow.

7. Supports Simplified/ Traditional Chinese, Japanese, Korean, Russian, Spanish, and English, etc.

8. Supports multi-track and multi-subtitle video file.

Switching sound track and subtitle at will.

9. External 5.2V/1.5A DC power supply.

HD Media Player

MP021-F10

Instructions

Dear customers:

Thanks for purchasing the product. Before using this player, please read the "instructions" carefully. We are not responsible for any damage for the hardware, program, file and system of the player caused by improper use. Please keep the manual as reference.

Notes

Please pay attention to the following notes before using it.

1. To prevent the fire or electric shock accident; do not expose this player in the rain or humid environment.
2. In order to reduce fire, electric shock or damage the product, do not let the machine be affected with damp or splash water drops.

 
 
3. Safety guide:

- Please use with the enclosed adapters, May not be able to share with other adapter.
- Please do not let the cable or the plug for the adapter near the heat source equipment.
- Please do not put heavy object on top of the adapter.
- Please do not overhaul the adapter and the power cord.
- Do not open the machine in order to safety, please contact the professional staff for repairing.

4 Maintenance Tips

- Non-professionals shall not open the machine in case to damage the complex machine.
- Users shall not open the machine and remove any parts otherwise the warranty expired.
- If you need maintenance, please contact your local department to arrange for repairing.
- If you need to replace components or accessories, it must be replaced with the original parts by manufacturer.

Front and Rear panel

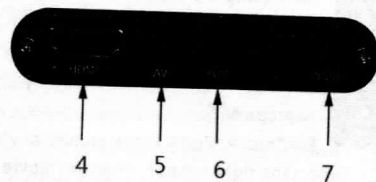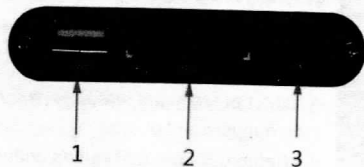

1. USB interface: Supports external HDD or U disk.
2. SD card interface: Supports SD card.
3. IR receiver.
4. HDMI: Through this interface it can get high-definition 720 or 1080P video output.
5. AV: Composite video and audio signal output.
6. YUV: YUV signal output.
7. DC: Input 5.2V/1.5A power.

Remote Control



1.<POWER>: on/off key. When power off, the system goes to standby model. It has to be unplugged to cut the power.

2.<MUTE>: Press this key sound off, press again sound on.

3.<Movie>, <Music>, <Photo>: Shortcut of movie, music, and photo.

4.<Setup>: Shortcut of setting options.

5.<GO-TO>: set up and view the playing time for playing the Video file.

6.<Repeat>: Select the playback mode.

7.<Ratio>: Set the full screen mode and original ratio, this function is only applicable to pictures.

8.<Zoom>: Zoom in the picture or video.

9.<SUB-T>: Select the right subtitle when the movie has multi-subtitle.

10.<Audio>: Select the sound track(for multitrack movie file)

11.<Ok>: Play or confirm key.

12.<OSD>: Press this key, the screen will display control menu when playing movie, music or picture.

13.<Return>: Press this key to return back to previous menu.

14.<REV> <FWD>: backward or forward.

15.<PREV><NEXT>Previous or next.

16.<AV>: Select AV output.

17.<HDMI>: Select high-definition output

18.<VGA>: Select VGA output.

19. <Rotate>: Rotate the pictures.

20.<VOL-> and <VOL+>: Adjust the volume.

● Remote control battery installation

There is a battery slot in the back of the remote control, open the cell door, according to the direction of the battery to build in two

AAA 1.5V batteries and then covered it.

● Remote control battery replacement

*Battery life usually depends on the quality or using frequently and the environment.

*If the remote control did not work, even close to the player, please replace the battery.

● Remote control operating range

* Remote control operating range is: not more than 7 meters from the front panel to the player, angle within 60 degrees;

* Remote control distance will be affected by the ambient light and the obstructions.

Connection method

● Connect with AV (TV):

Through the AV cable connects the TV and the player, can output composite video and audio signal. Plug the three plugs, which are red, yellow and white, into the TV's AV input port.

 
The other side connects to the device's AV output port.

Change the TV to AV mode and press <CVBS> button on the remote.

● Connect with HDMI (TV):

Through the HDMI cable connects the TV and the player, can output high-definition images and sound. Change the TV to HDMI mode and press <HDMI> button on the remote.

After connecting with power supply and TV, the image will be shown as below:

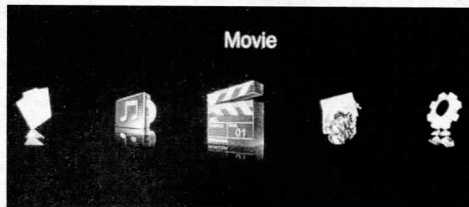

The main functions are File, Music, Movie, Photos and Setting. Choose any icon with <OK> key.

Playing operation

1 Movie

Click Movie icon and press <Ok> to enter or press movie button on remote. Videos can be chosen from USB or SD card:

 


USB Device includes external HDD, U disk or card reader. Enter into USB Device or smart card, all files and videos can be seen.

Choose one video and press <OK> to play.

If the device does not support the format of the elected videos, the system will jump into the next file until the supported format video is chosen.

When playing, press <OSD> button on remote and a control bar will be shown as below:

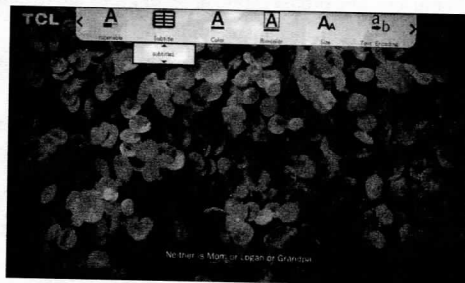

ON/OFF subtitle, color, size, text encoding and so on can be chosen.



As shown above : You can view the current playback time and the total time of the film source by operating the GOTO button on the remote control during video playback, and you can adjust the playback progress.

2 Photo

Click Photo icon and press <Ok> to enter or press photo button on remote. Photos can be chosen from USB or SD card: Enter into USB Device or smart card, all files and photos can be seen. Choose one photo and press <OK> to watch.

When playing, press <OSD> button on remote and a control bar will be shown as below:



Switch mode, play interval, and background music can be chosen.

Right now the player is in pause status and press <Return> to resume.

When you play a picture slideshow, you can rotate the angle of the picture display by pressing the Rotate button. It is only for viewing, and the rotation angle cannot be saved. The original will be restored when playing.

Press <Ratio>: Set the full screen mode and original ratio, this function is only applicable to pictures.

 
3 Music

Click Music icon and press <Ok> to enter or press Music button on remote. Music can be chosen from USB or SD card:



Enter into USB Device or smart card, all files and music can be seen. Choose one music and press <OK> to play.

When playing, press <OSD> button on remote and a control bar will be shown as below:

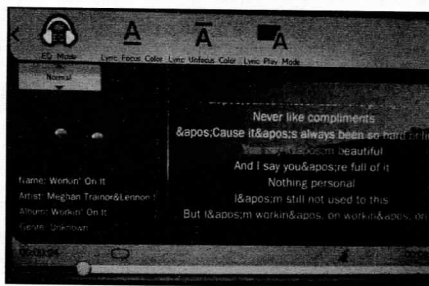

EQ mode, Lyric focus color, lyric unfocus color, and lyric play mode can be chosen.

NOTE:

1. After press < OSD> button without any other operations, the control bar will disappear only <Return> button has pressed. It will not affect the continuous play.

2. The device supports lyric. It has to change the lyric name as the same as the song.

For example:

Song name: Hero.mp3

Lyric name: Hero.lyc

Or no lyric will be shown only wave stripe

3. <Background Music> There are two ways to turn on background music.

1 Put one music and picture on the same directory, press <OSD> when browse pictures and turn on the background music, then press OK to start playing background music.

2 Press <Return> button while music playback mode, then go to picture mode to open a picture. Press <Stop> button to stop background music.

4. FILE

Click File icon and press <Ok> to enter or press File button on remote. Files can be chosen from USB or SD card:

 
Enter into USB Device or smart card, all files can be seen. Choose any file and press <OK> to play.



A file with "!" in front means the player does not support this format.

5 setting

Click setting icon and press<Ok>to enter or press <Setup> button on remote. As shown below:

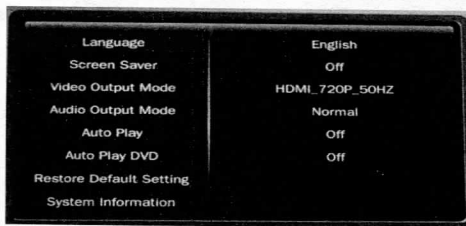


1.Video output mode

The player supports PAL、NTSC、YPBPR-720P、YPBPR-1080P、HDMI 720P(50HZ)、HDMI 720P(60HZ)、HDMI 1080P(50HZ)、HDMI 1080P(60HZ)、VGA1024X768、VGA1920 X

1080 and so on.

 Press< OK> to confirm

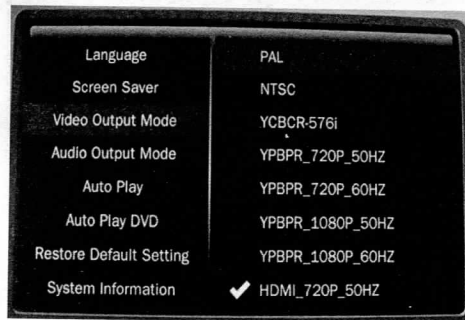

Note : If you need to use AV to connect to the TV, please choose PAL or NTSC, you can also directly press the remote control AV button.

2.Language

The player supports Simplified Chinese, traditional Chinese, English, Russian, Portuguese, Spanish, Korean, Japanese etc.

3.Screen saver

| | |
|-------------------------|------------|
| Language | 1 minute |
| Screen Saver | 2 minutes |
| Video Output Mode | 5 minutes |
| Audio Output Mode | 10 minutes |
| Auto Play | 30 minutes |
| Auto Play DVD | 1 hour |
| Restore Default Setting | 2 hours |
| System Information | ✓ Off |

Set screen saver time and it can shut down.

4.Normal, SPDIF LPCM, and SPDIF RAWDATA : A/V can be chosen.

If you need an external speaker, please use our AV cable to connect your speaker L / R interface, and select A / V for audio output mode.

5 Auto play

| | |
|-------------------------|-------|
| Language | ✓ Off |
| Screen Saver | movie |
| Video Output Mode | music |
| Audio Output Mode | photo |
| Auto Play | |
| Auto Play DVD | |
| Restore Default Setting | |
| System Information | |

It can auto play videos, music, or photos which are stored in disc.

6 Auto play DVD

Open or close auto play DVD

7 Restore Default Setting

Restore all parameters to the factory state

Accessories

| | | | |
|-------------------|---|-------------------|---|
| Media Player | 1 | Remote controller | 1 |
| 5.2V/1.5A adapter | 1 | AV cable | 1 |
| User manual | 1 | | |

FAQ

Q: There has no signal on TV screen.

A: Check the AV or HDMI cable is connected properly, or press the CVBS or HDMI keys with the remote control.

Q: Sometimes the device does not have any responses.

A: Power off the player and restart it.

Q: Picture jamming.

A: Check the AV or HDMI cable is connected properly.

The enclosed cables are highly recommended for use.

Specifications

- 1.Supports plug-in large capacity SATA or IDE hard disk or U disk, plug and play.
- 2.Supports SD card.
3. Supports NTSC/PAL composite video, VGA 720P, HDMI 720P,

1080P high definition video output.

4. Supports RMVB/RM(RV8/9), h.263, h.264, MOV/MP4/M4V, MPEG-1/2(VOB), MPEG-4(XVID/DIVX), WMV7/VC-1, MKV, AVI, TS/TP, VOB, PMP, FLV 1920*1080P video format.

5. Supports MP3, WMA, AFE, FLAC, OGG, APE, AAC, AC3 and DTS music formats.

6. Supports JPEG, GIF, BMP, PNG photo formats. Supports rotate, zoom and slideshow.

7. Supports Simplified/ Traditional Chinese, Japanese, Korean, Russian, Spanish, and English, etc.

8. Supports multi-track and multi-subtitle video file.

Switching sound track and subtitle at will.

9. External 5.2V/1.5A DC power supply.